


# **Technical Bulletin**

**Pionite® ChemGuard** laminate incorporates the decorative features of high pressure laminate into a durable chemical resistant surfacing material. ChemGuard is available in any Pionite® color, and can be made in thicknesses between 0.028 inches (0.711mm) and 1 inch (25mm). Thicker grades of ChemGuard can be used as self supporting worktops.

The unique manufacturing process of ChemGuard results in a product with chemical resistant properties throughout its thickness. This feature ensures that the ChemGuard surface is more durable and chemical resistant than competitive laminate, even after the surface has been scratched. ChemGuard's superior chemical resistant surface cannot be softened with heat for postforming.

# **Product Composition**

ChemGuard laminate is manufactured in a flat press by combining decorative papers saturated in chemical resistant resin with phenolic impregnated kraft layers at pressures exceeding 1000 psi (6.9 MPa) and temperatures approaching 300°F (150°C). The panels are trimmed to size and the backs are sanded to facilitate bonding. The number of kraft layers used determines the thickness of the laminate. The laminating process combines the durability of chemical resistant resins with the aesthetics of decorative papers creating a surfacing material that has been the standard for many years.

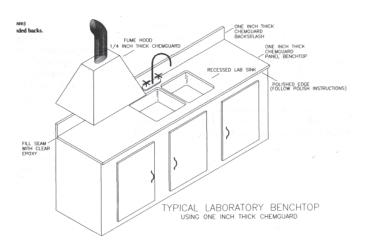

# **Product Description and Finish Options**

ChemGuard can be manufactured with brown or black phenolic core. Laminate edges can be polished for a finished appearance. To further enhance the edge appearance, ChemGuard can be manufactured with colored stripes within the core. Thicker grades of ChemGuard laminate can be very heavy. Because of this increased weight, manual handling may be difficult. Please consult the chart for approximate sheet weight and thickness.

# **Typical ChemGuard Product Types**

	H28	H48	HD2	HD5	HD8	HDI
Thickness (in.)	0.028	0.048	0.25	0.50	0.75	1.00
(mm)	0.71	1.2	6.4	13	19	25
Unit (lb/ft2)	0.21	0.34	1.82	3.68	5.43	7.44
Weight (kg/m2)	1.0	1.7	9.2	18.0	26.6	36.3

# **Finish Options**

# Finish (Code) Description

Suede (N) Low gloss, textured finish, 12 ± 3 gloss units

Crystal (J) Fine pebble grained finish with a

medium gloss, 15  $\pm$  3 gloss units

# ChemGuard is available in the following sizes:

#### Nominal widths:

36" (915mm), 48" (1220mm) and 60" (1525mm)

# Nominal lengths:

96" (2440mm), 120" (3050mm) and 144" (3660mm)

Other widths and thicknesses of Chemguard are available upon request. ChemGuard laminates thicker than 0.125" are not available with sanded backs.

#### Stain and Chemical Resistance

ChemGuard Laminate is in conformance with NEMA LDS-2005 3.4 stain resistance and SEFA 8-PL-2010 recommended practices, section 8.1 chemical resistance.

# **Typical Uses**

Typical uses include laboratory benchtops, cabinets, casework, and fume hoods. ChemGuard is ideal for photographic darkrooms, nurse's workstations, medical, dental and veterinary work areas, and mortuaries.

Thicker ChemGuard laminate can be used as structural components in laboratory benchtops, precluding the use of a substrate.

# **Fabrication Tips**

When working with ChemGuard, these techniques will promote a quality application.

- Proper conditioning of the laminate, substrate and backing sheet minimizes possible warping, shrinking, or expansion of assembled panels. Ideally, all components should be conditioned at 70°F to 75°F (21°C to 25°C) and 45 to 50 percent relative humidity for 48 hours prior to assembly.
- Proper substrate must be used when bonding ChemGuard laminate. Recommended substrates include particleboard and medium density fiberboard. Plaster walls, gypsum wallboard and concrete substrates are not recommended.
- 3. Permanent adhesive types, such as polyvinyl acetate (PVA), epoxy or resorcinol are recommended for ChemGuard laminates with sanded backs. To enhance the chemical resistance at seams, epoxy adhesive may be used. For best results, follow the recommendations of the adhesive manufacturer.

- 4. The use of a backing sheet is recommended to minimize warpage. The thickness of the backing sheet should be similar to the thickness of the decorative laminate on the face of this assembly.
- 5. Epoxy adhesive is recommended for joining thick ChemGuard components. Light sanding of the glue surface will improve bond strength.
- 6. All saw blades and router bits should be carbide tipped and well sharpened. Tool speed should be high and feed rate slow to minimize the possibility of chipping.
- Inside corners of cutouts for electrical outlets, sinks, etc., should have a minimum radius of 1/8" (3mm) and be filed smooth. This reduces the likelihood of stress cracks.
- 8. All edges of laminate should be filed smooth with file direction towards substrate to help prevent stress cracks and to minimize chipping.
- Drill oversize holes for fasteners such as screws or bolts.
- 10. Do not screw into the edges of ChemGuard laminate.
- 11. Revealed edges of thicker panels may be shaped and/or finished using standard woodworking practices. The edges can then be polished with a light oil resulting in an attractive finish that accents the decorative surface.
- 12. All laminate is intended for interior use only, and should not be exposed to extreme humidity, continuous sunlight, or temperatures above 275°F (135°C) for extended periods of time.

# ChemGuard Chemical Resistance Testing Results Following SEFA Procedures

# Summary of Test Procedure (SEFA 8, Section 8.1)

Method A: Volatile chemicals are tested by placing a cotton ball saturated with the reagent in the mouth of a 1-ounce bottle and inverting the bottle on the surface of the laminate.

Method B: Non-volatile chemicals are tested by placing five drops of the reagent on the surface of the laminate and covering with 24mm watch glass.

For both methods, the reagents are left on the laminate for a period of 24 hours. The laminate is then washed with water, cleaned with detergent and naphtha, rinsed with deionized water and dried with a towel. The effect of the different reagents is evaluated according to the rating system below, after the laminate has equilibrated at a temperature of 73± 3°F (23± 2°C) and relative humidity of 50% for 24 hours. SEFA criteria for laboratory grade finishes are no more than four Level 3 conditions.

Hydrochloric acid   37%	ds	Level	o - No Effect	1 - Slight change in color or gloss	2 - Slight surface etch or surface stain	3 - Surface deterioration
Sulphuric acid         77%         X           Sulphuric acid         98%         X           Nitric acid         30%         X           Nitric acid         70%         X           Phosphoric acid         85%         X           Ushidoroacetic acid         X         X           Hydrofluoric acid         48%         X           Chromic acid         60%         X           Acid Dichromate         5%         X           Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X           Bases         X         X           Ammonium Hydroxide         28%         X           Sodium Hydroxide         10%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide         40%         X           Sodium Hydroxide, Flake         X         X           Soliver Nitrate         Saturated         X           Soliver Nitrate         Saturated         X           Soliver Nitrate         Saturated         X           Formaldehyde         37%         X           Formaldehyde         37%         X           Formaldehyde         37%         X <t< td=""><td>rochloric acid</td><td>37%</td><td></td><td>Х</td><td></td><td></td></t<>	rochloric acid	37%		Х		
Sulphuric acid         98%         X           Niltric acid         30%         X           Nitric acid         70%            Phosphoric acid         85%         X           Hydrofluoric acid         48%         X           Hydrofluoric acid         60%         X           Acid Dichromate         5%         X           Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X           Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X           Bases         X           Ammonium Hydroxide         28%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide, Flake         X         X           Solium Hydroxide, Flake         X         X           Salt         Silver Nitrate         Saturated         X           Solium Chloride         10%         X           Solium Chloride         10%         X           Solvenic Chemicals         X           Formaldehyde         37%         X           Formaldehyde         37%         X           Formaldehyde         X         X	huric acid	33%	X			
Nitric acid 30%	huric acid	77%	X			
Nitric acid         70%         X           Phosphoric acid         85%         X           Dichloroacetic acid         X         X           Hydrofluoric acid         68%         X           Acid Dichromate         5%         X           Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X           Bases         X         X           Ammonium Hydroxide         28%         X           Sodium Hydroxide         28%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide, Flake         X         X           Salt         Silver Nitrate         Saturated         X           Solium Chloride         20%         X           Solium Chloride         30%         X           Solium Chloride         Saturated         X           Organic Chemicals         X           Formaldehyde         37%         X           Furfural         X           Solvents         X           Acetone         X           Ethyl alcohol         X           Ethyl alcohol         X           Ethyl acetate	huric acid	98%			X	
Phosphoric acid         85%         X         Dichloroacetic acid         X         Dichloroacetic acid         X         X         Chromic acid         60%         X         X         Acid Dichromate         5%         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         X         Sulfuric Acid 70% / Nitric Acid 70% - Equal Amounts         X         X         X         Sulfuric Acid 70% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 70% / Nitric Acid 70% - Equal Amounts         X         X         Sulfuric Acid 70% / Nitric Acid	ic acid	30%			X	
Dichloroacetic acid         X         X         Hydrofluoric acid         48%         X         X         Acid Dichromate         5%         X         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 77% / Nitric Acid 70% - Equal Amounts         X         Suffuric Acid 70% - Equal Amounts         X <td>ic acid</td> <td>70%</td> <td></td> <td></td> <td></td> <td>X</td>	ic acid	70%				X
Hydrofluoric acid	sphoric acid	85%		X		
Chromic acid         60%         X           Acid Dichromate         5%         X           Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X           Bases         Sodium Hydroxide         28%         X           Sodium Hydroxide         10%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide, Flake         X         Sodium Hydroxide, Flake           Salt         Silver Nitrate         Saturated         X           Silver Nitrate         Saturated         X           Sodium Chloride         10%         X           Zinc Chloride         Saturated         X           Organic Chemicals         X           Formaldehyde         37%         X           Formaldehyde         37%         X           Formaldehyde         37%         X           Solvents         X         Solvents           Surfural         X         Solvents           Solvents         X <td>loroacetic acid</td> <td></td> <td>X</td> <td></td> <td></td> <td></td>	loroacetic acid		X			
Acid Dichromate   5%	rofluoric acid	48%		X		
Sulfuric Acid 77% / Nitric Acid 70% - Equal Amounts         X           Bases         Ammonium Hydroxide         28%         X           Sodium Hydroxide         10%         X         Sodium Hydroxide         20%         X           Sodium Hydroxide         40%         X         Sodium Hydroxide, Flake         X         Sodium Hydroxide, Flake         X         Sodium Hydroxide, Flake         X         Sodium Hydroxide, Flake         X         Sodium Choride, Flake         X         Sodium Choride, Flake         X         Sodium Choride         X         X         Sodium Choride         X         X	omic acid	60%	X			
Bases  Ammonium Hydroxide 28% X Sodium Hydroxide 10% X Sodium Hydroxide 20% X Sodium Hydroxide 40% X Sodium Hydroxide, Flake X Sodium Hydroxide, Flake X Salt  Silver Nitrate Saturated X Sodium Chloride 10% X Zinc Chloride Saturated X Organic Chemicals  Formaldehyde 37% X Furfural X Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate A Amyl acetate X Amyl	Dichromate	5%		X		
Ammonium Hydroxide 28% X Sodium Hydroxide 10% X Sodium Hydroxide 20% X Sodium Hydroxide 40% X Sodium Hydroxide, Flake X Sodium Hydroxide, Flake X Salt Silver Nitrate Saturated X Silver Nitrate Saturated X Sodium Chloride 10% X Zinc Chloride Saturated X Organic Chemicals Formaldehyde 37% X Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate	uric Acid 77% / Nitric Acid 70%	- Equal Amounts			Х	
Sodium Hydroxide         10%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide, Flake         X         X           Salt         X         X           Silver Nitrate         Saturated         X           Sodium Chloride         10%         X           Zinc Chloride         Saturated         X           Organic Chemicals           Formaldehyde         37%         X           Furfural         X         X           Solvents           Acetone         X         X           Ethylalcohol         X         X           Ethylene glycol         X         X           Methylethylketone         X         X           Dichloromethane         X         X           Ethyl acetate         X         X           Amyl acetate         X         X           Methyl alcohol         X         X           Phenol         X         X						
Sodium Hydroxide         10%         X           Sodium Hydroxide         20%         X           Sodium Hydroxide, Flake         X         X           Sodium Hydroxide, Flake         X         X           Salt         Saturated         X           Silver Nitrate         Saturated         X           Sodium Chloride         10%         X           Zinc Chloride         Saturated         X           Organic Chemicals         X         X           Formaldehyde         37%         X           Furfural         X         X           Solvents         X         X           Acetone         X         X           Ethylalochol         X         X           Ethylene glycol         X         X           Methylethylketone         X         X           Dichloromethane         X         X           Ethyl acetate         X         X           Methyl acetate         X         X           Methyl alcohol         X         X           Phenol         X         X	nonium Hydroxide	28%	Х			
Sodium Hydroxide 20% X Sodium Hydroxide 40% X Sodium Hydroxide, Flake X  Salt  Silver Nitrate Saturated X Sodium Chloride 10% X Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X  Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Amyl acetate X Amyl acetate X Methyl alcohol X Ethyl alcohol X Employed X Amyl acetate X Amyl acetate X Amyl acetate X Amyl acetate X Methyl alcohol X Ethyl alcohol X Ethyl alcohol X Ethyl acetate X Amyl alcohol X Ethyl alcohol X		10%	X			
Sodium Hydroxide 40% X Sodium Hydroxide, Flake X  Salt  Silver Nitrate Saturated X Sodium Chloride 10% X Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X  Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Methyl acetate X Methyl alcohol X Employed X E		20%				
Solium Hydroxide, Flake  Salt  Silver Nitrate Saturated Sodium Chloride 10% X Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X  Solvents  Acetone Ethyl alcohol Ethylene glycol Methylethylketone Dichloromethane Ethyl acetate Amyl acetate N  Methyl acetate N  Methyl acetate N  Methyl acetate N  Methyl acetate Methyl alcohol X  Methyl acetate N  Methyl alcohol N  Methyl alcohol N  Methyl alcohol N  Methyl alcohol N  Methyl acetate N  Methyl alcohol N  Methyl alco		40%	X			
Silver Nitrate Saturated X Sodium Chloride 10% X Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Amyl acetate X Amyl acetate X Methyl alcohol X Methyl alcohol X Employed X Methyl acetate X Amyl acetate X Methyl acetate X Methyl alcohol X			X			
Sodium Chloride 10% X Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Amyl acetate X Methyl alcohol X  Methyl acetate X Amyl acetate X Methyl alcohol X  Methyl acetate X Methyl alcohol X  Methyl acetate X Methyl alcohol X	t					
Sodium Chloride 10% X Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Amyl acetate X Methyl acetate X Methyl alcohol X  Methyl acetate X Amyl acetate X Methyl acetate X Methyl alcohol X Methyl alcohol X  Methyl acetate X Methyl alcohol X	er Nitrate	Saturated		Х		
Zinc Chloride Saturated X  Organic Chemicals  Formaldehyde 37% X  Furfural X  Solvents  Acetone X  Ethyl alcohol X  Ethylene glycol X  Methylethylketone X  Dichloromethane X  Ethyl acetate X  Amyl acetate X  Amyl acetate X  Methyl alcohol X  Methyl alcohol X  Ethyl acetate X  Amyl acetate X  Methyl acetate X  Methyl alcohol X			X			
Formaldehyde 37% X Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Methyl acetate X Methyl acetate X Methyl acetate X Methyl alcohol X Methyl alcohol X Methyl acetate X Methyl alcohol X Methyl alcohol X Methyl alcohol X Methyl alcohol X	Chloride	Saturated				
Formaldehyde 37% X Furfural X  Solvents  Acetone X Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X Methyl acetate X Methyl acetate X Methyl acetate X Methyl alcohol X Methyl alcohol X Methyl acetate X Methyl alcohol X Methyl alcohol X Methyl alcohol X Methyl alcohol X	anic Chemicals					
Furfural         X           Solvents         X           Acetone         X           Ethyl alcohol         X           Ethylene glycol         X           Methylethylketone         X           Dichloromethane         X           Ethyl acetate         X           Amyl acetate         X           n-Butyl acetate         X           Methyl alcohol         X           Phenol         X		37%	Х			
Acetone         X           Ethyl alcohol         X           Ethylene glycol         X           Methylethylketone         X           Dichloromethane         X           Ethyl acetate         X           Amyl acetate         X           n-Butyl acetate         X           Methyl alcohol         X           Phenol         X	•		Х			
Ethyl alcohol X Ethylene glycol X Methylethylketone X Dichloromethane X Ethyl acetate X Amyl acetate X n-Butyl acetate X Methyl alcohol X Phenol X	vents					
Ethylene glycol         X           Methylethylketone         X           Dichloromethane         X           Ethyl acetate         X           Amyl acetate         X           n-Butyl acetate         X           Methyl alcohol         X           Phenol         X	cone		Х			
Ethylene glycol         X           Methylethylketone         X           Dichloromethane         X           Ethyl acetate         X           Amyl acetate         X           n-Butyl acetate         X           Methyl alcohol         X           Phenol         X	/l alcohol		X			
Methylethylketone     X       Dichloromethane     X       Ethyl acetate     X       Amyl acetate     X       n-Butyl acetate     X       Methyl alcohol     X       Phenol     X			X			
Dichloromethane         X           Ethyl acetate         X           Amyl acetate         X           n-Butyl acetate         X           Methyl alcohol         X           Phenol         X						
Amyl acetate         X           n-Butyl acetate         X           Methyl alcohol         X           Phenol         X			X			
n-Butyl acetate X Methyl alcohol X Phenol X	/l acetate		X			
n-Butyl acetate X Methyl alcohol X Phenol X			X			
Methyl alcohol X Phenol X			X			
Phenol X			X			
Ethyl Ethor	-					
Euryr Eurier A	/l Ether		X			
Toluene Trichloroethylene Xylene X						

 $<sup>\</sup>hbox{*All test results based on our knowledge of testing procedures}$ 

<sup>\*</sup>Tests results may differ by color

#### Care and Maintenance

Pionite® ChemGuard laminate provides a durable surface that is easy to maintain using ordinary care.

To maintain the laminate's lasting beauty, cleaning with a solution of warm water and liquid dishwashing detergent is all that should be required in most cases. Stains may be removed with most non-abrasive household cleaners such as FORMULA 409®, GLASS PLUS® or WINDEX® with AMMONIA D®. Light scrubbing with a soft bristled brush may be necessary to remove stains from the depth of the structure on some textured surfaces.

If the stain persists, use a paste of baking soda and water and apply with a soft bristled brush. Light scrubbing for 10-20 strokes should remove most stains. Although baking soda is a low abrasive, excessive scrubbing or exerting too much force may damage the decorative surface. Although ChemGuard laminate provides superior chemical resistant properties, prolonged exposure to harsh chemicals can cause permanent damage. Timely clean up and neutralization of chemical spills will prolong the useful service life of the laminate.

#### **Codes and Certifications**

- American National Standards Institute/National Electrical Manufacturers Association (ANSI/NEMA)LD3-2005, "High-Pressure Decorative Laminate" for HGS. Type H48 complies.
- American National Standards Institue/National Electrical manufacturers Association (ANSI/NEMA) LD3-2005, "High-Pressure Decorative Laminate" for CGS Types HD2, HD5, HD8 and HDI complies.
- 3. The City of New York, Dept. of Buildings, Materials and Equipment Acceptance Division approval codes are as follows: H48-MEA 207-93-M

# **Limited Warranty**

Subject to the limitations set forth below, Panolam® Industries International Inc. (Panolam) expressly warrants that our products are reasonably free of defects in material and workmanship, and when properly handled and fabricated will conform, within accepted tolerances, to applicable manufacturing specifications as set forth in our technical brochure. This warranty shall extend to the original buyer for a period of twelve (12) months from the date of shipment of this product

by Panolam, and shall not be assignable by the original buyer. This warranty does not cover damage resulting from accident, misuse, alteration, abuse or lack of reasonable care.

Due to the variety of uses and applications to which this product may be put, and because the manufacturer has no control over the end products fabricated, the warranty set forth above is exclusive and in lieu of all warranties, expressed or implied, in fact or by operation of law or otherwise, or arising by course of dealing or performance, custom or usage in the trade, including, without limitation, the implied warranties of fitness for a particular purpose and merchantability, and Panolam shall have no obligation or liability to any person or entity in connection with or arising from the furnishing, sale, installation or repair, use or subsequent sale of any product supplied by it.

Our maximum liability arising out of the sale of the products or their use, whether based upon warranty, contract, tort or otherwise, shall not exceed the actual payments received by us in connection therewith. In no event shall we be liable for special, incidental or consequential damages, including, but not limited to, arising hereunder or from the loss of profits, or loss of use damages, sales of the products.

# Headquarters

Panolam® Industries International, Inc.

20 Progress Drive Shelton, CT 06484

1-877-726-6526

www.panolam.com



© 2016 Panolam Industries International, Inc.

1/2016